


UNITED MOULDERS LTD

UML - ProSensor Manual Re-Arming Instructions

lss 4

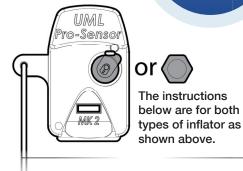

- Do not detach the inflator from the lifejacket.
- Before commencing the re-arming procedure ensure you have the correct re-arming kit with the correct size of CO² cylinder and that the lifejacket is dry.
- Keep away from fluids.



Step 1

Remove the pierced CO² cylinder by turning it anti-clockwise and discard it in an environmentally friendly manner.





Step 2

Push the lever back into its slot until it clicks into position



Ensure the black CO² cylinder seal is fitted correctly.





Step 4

Ensure the CO² cylinder cap has not been pierced and then screw it clockwise into the ProSensor Manual. Tighten up, hand tight.

Step 5

If the inflator has been assembled correctly, the indicator panel will be green.



• When not in use, store the lifejacket in a cool, dry place out of direct sunlight.